

Steering Gear Adjustment

To remove any excessive play in the steering, you should carry out the following adjustments:

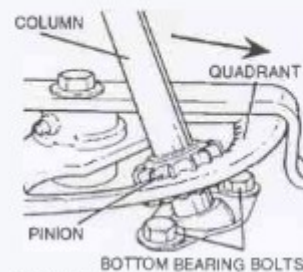


Figure 7.
Steering Gear Adjustment

1. Observe all safety precautions.
2. Slacken the two nuts and bolts securing the bottom bearing of the steering column to the chassis. (see fig. 5).
3. Pull the steering column forward and hold it there to take up any play between the Quadrant and the Pinion.
4. Still holding the column forward, retighten the nuts and bolts securing the bearing.
5. Check the steering to ensure that you have not over-done it and the gears do not mesh too tightly. The excessive play should have gone but the wheels should be turnable without undue effort.